



WPC Co-Extrusion Decking


Installation Manual

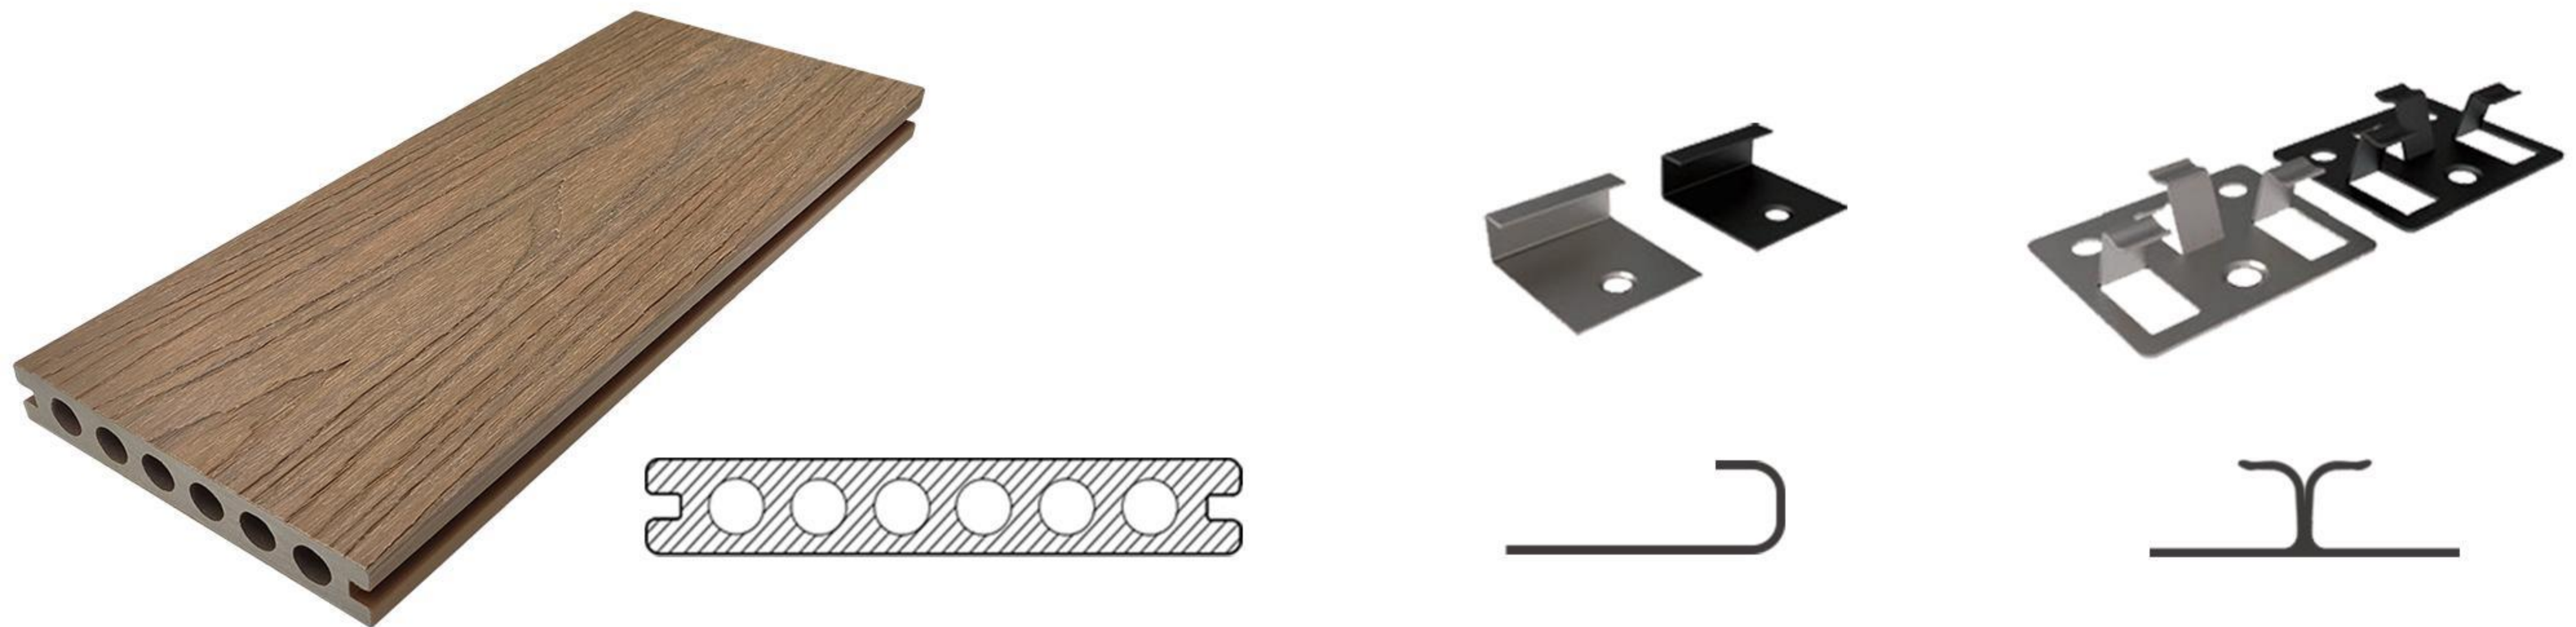




Step1: The first step is to lay the keel, the keel spacing is 30cm

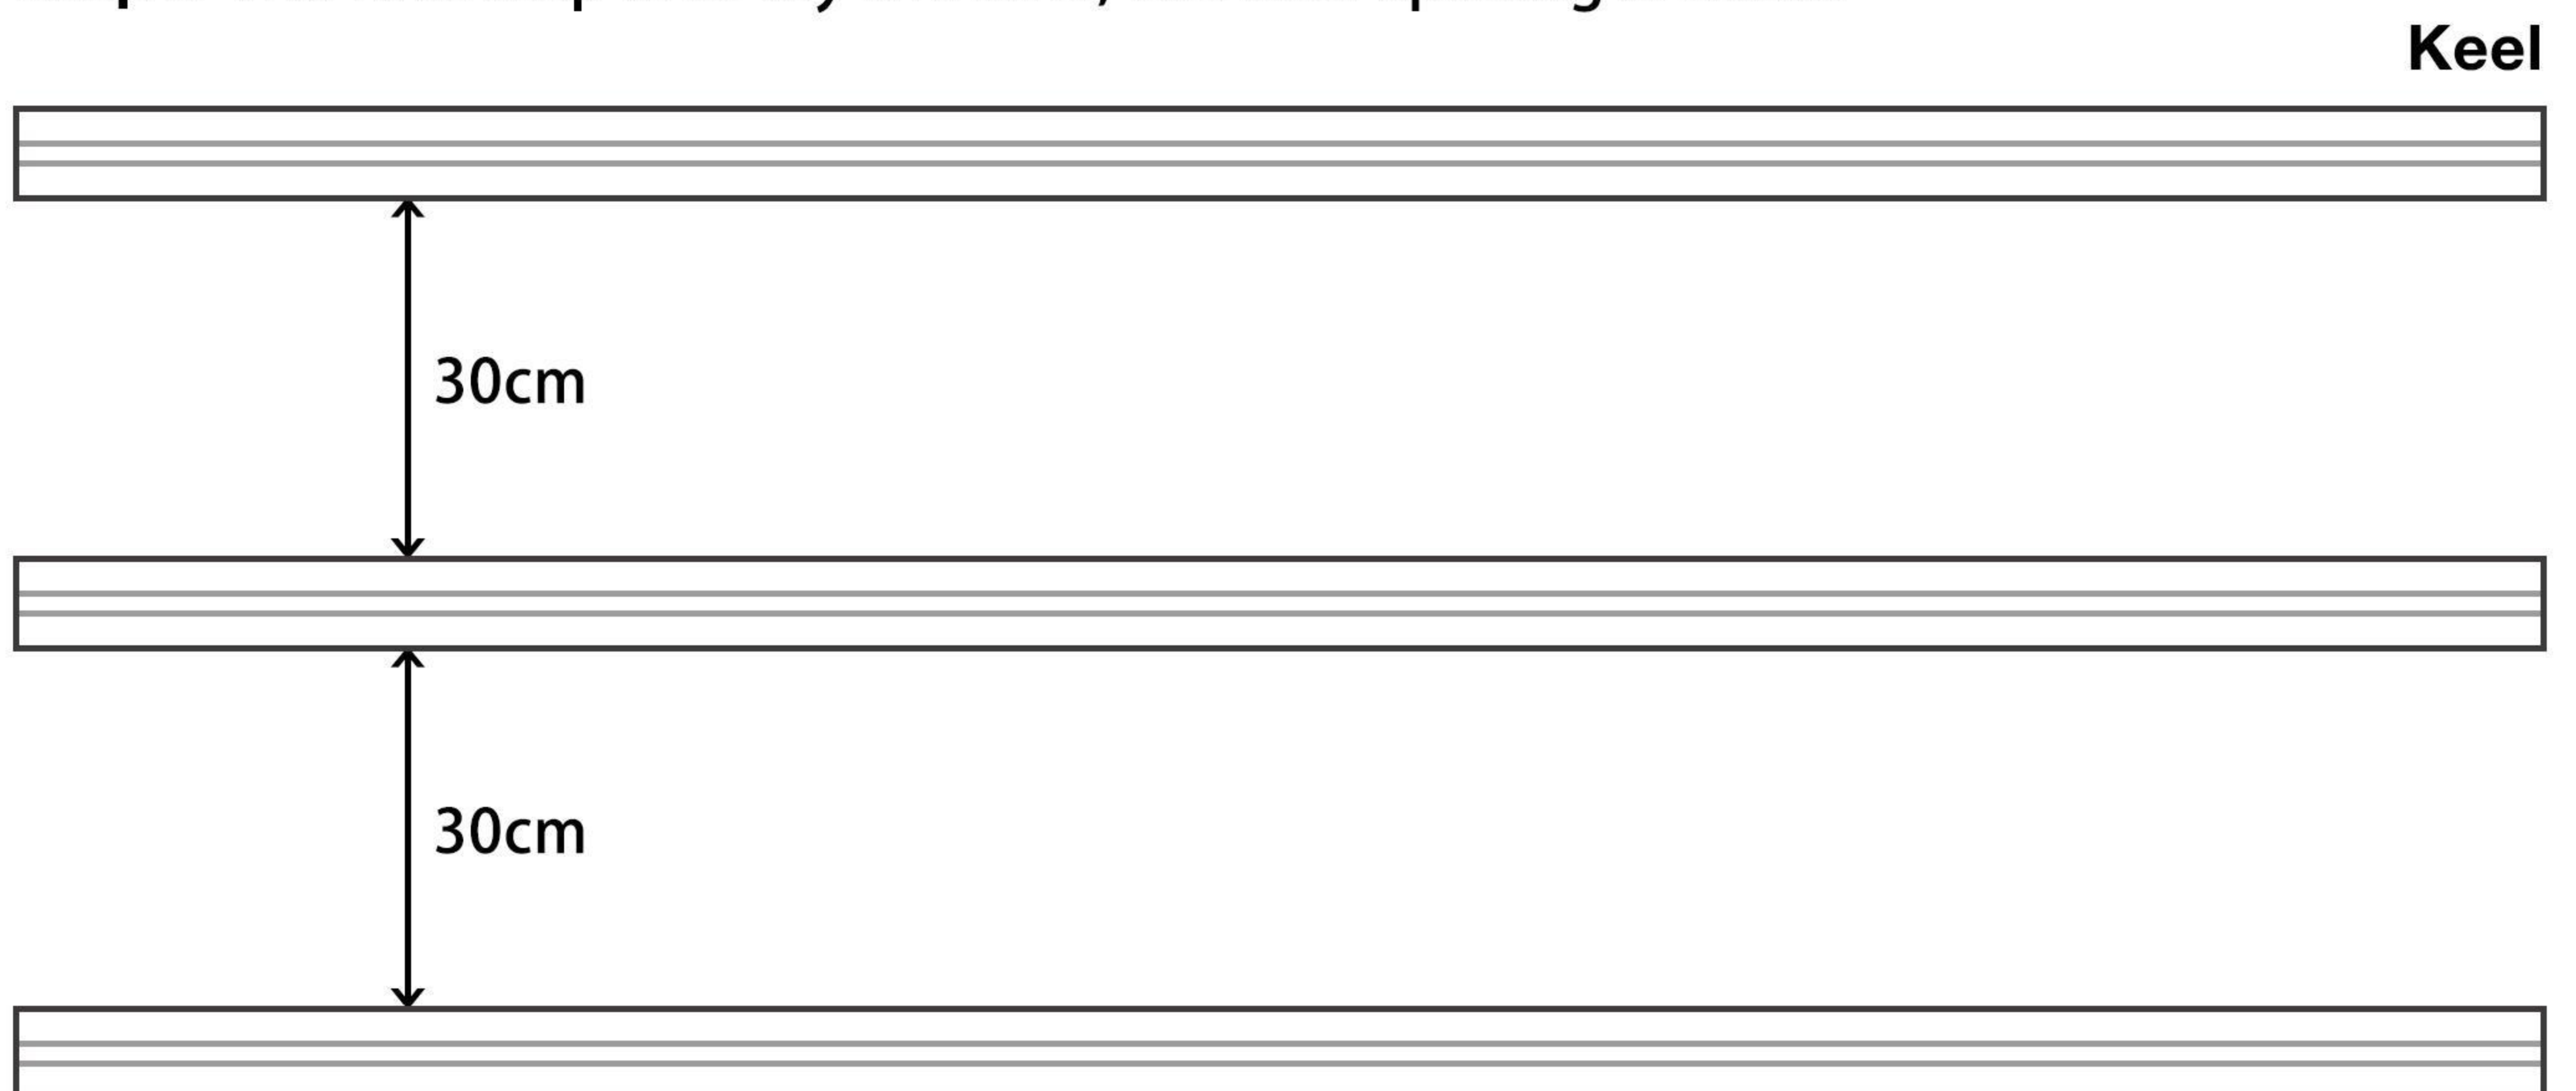


Step2: Nail the starting buckle on the keel to fix the floor of the first row

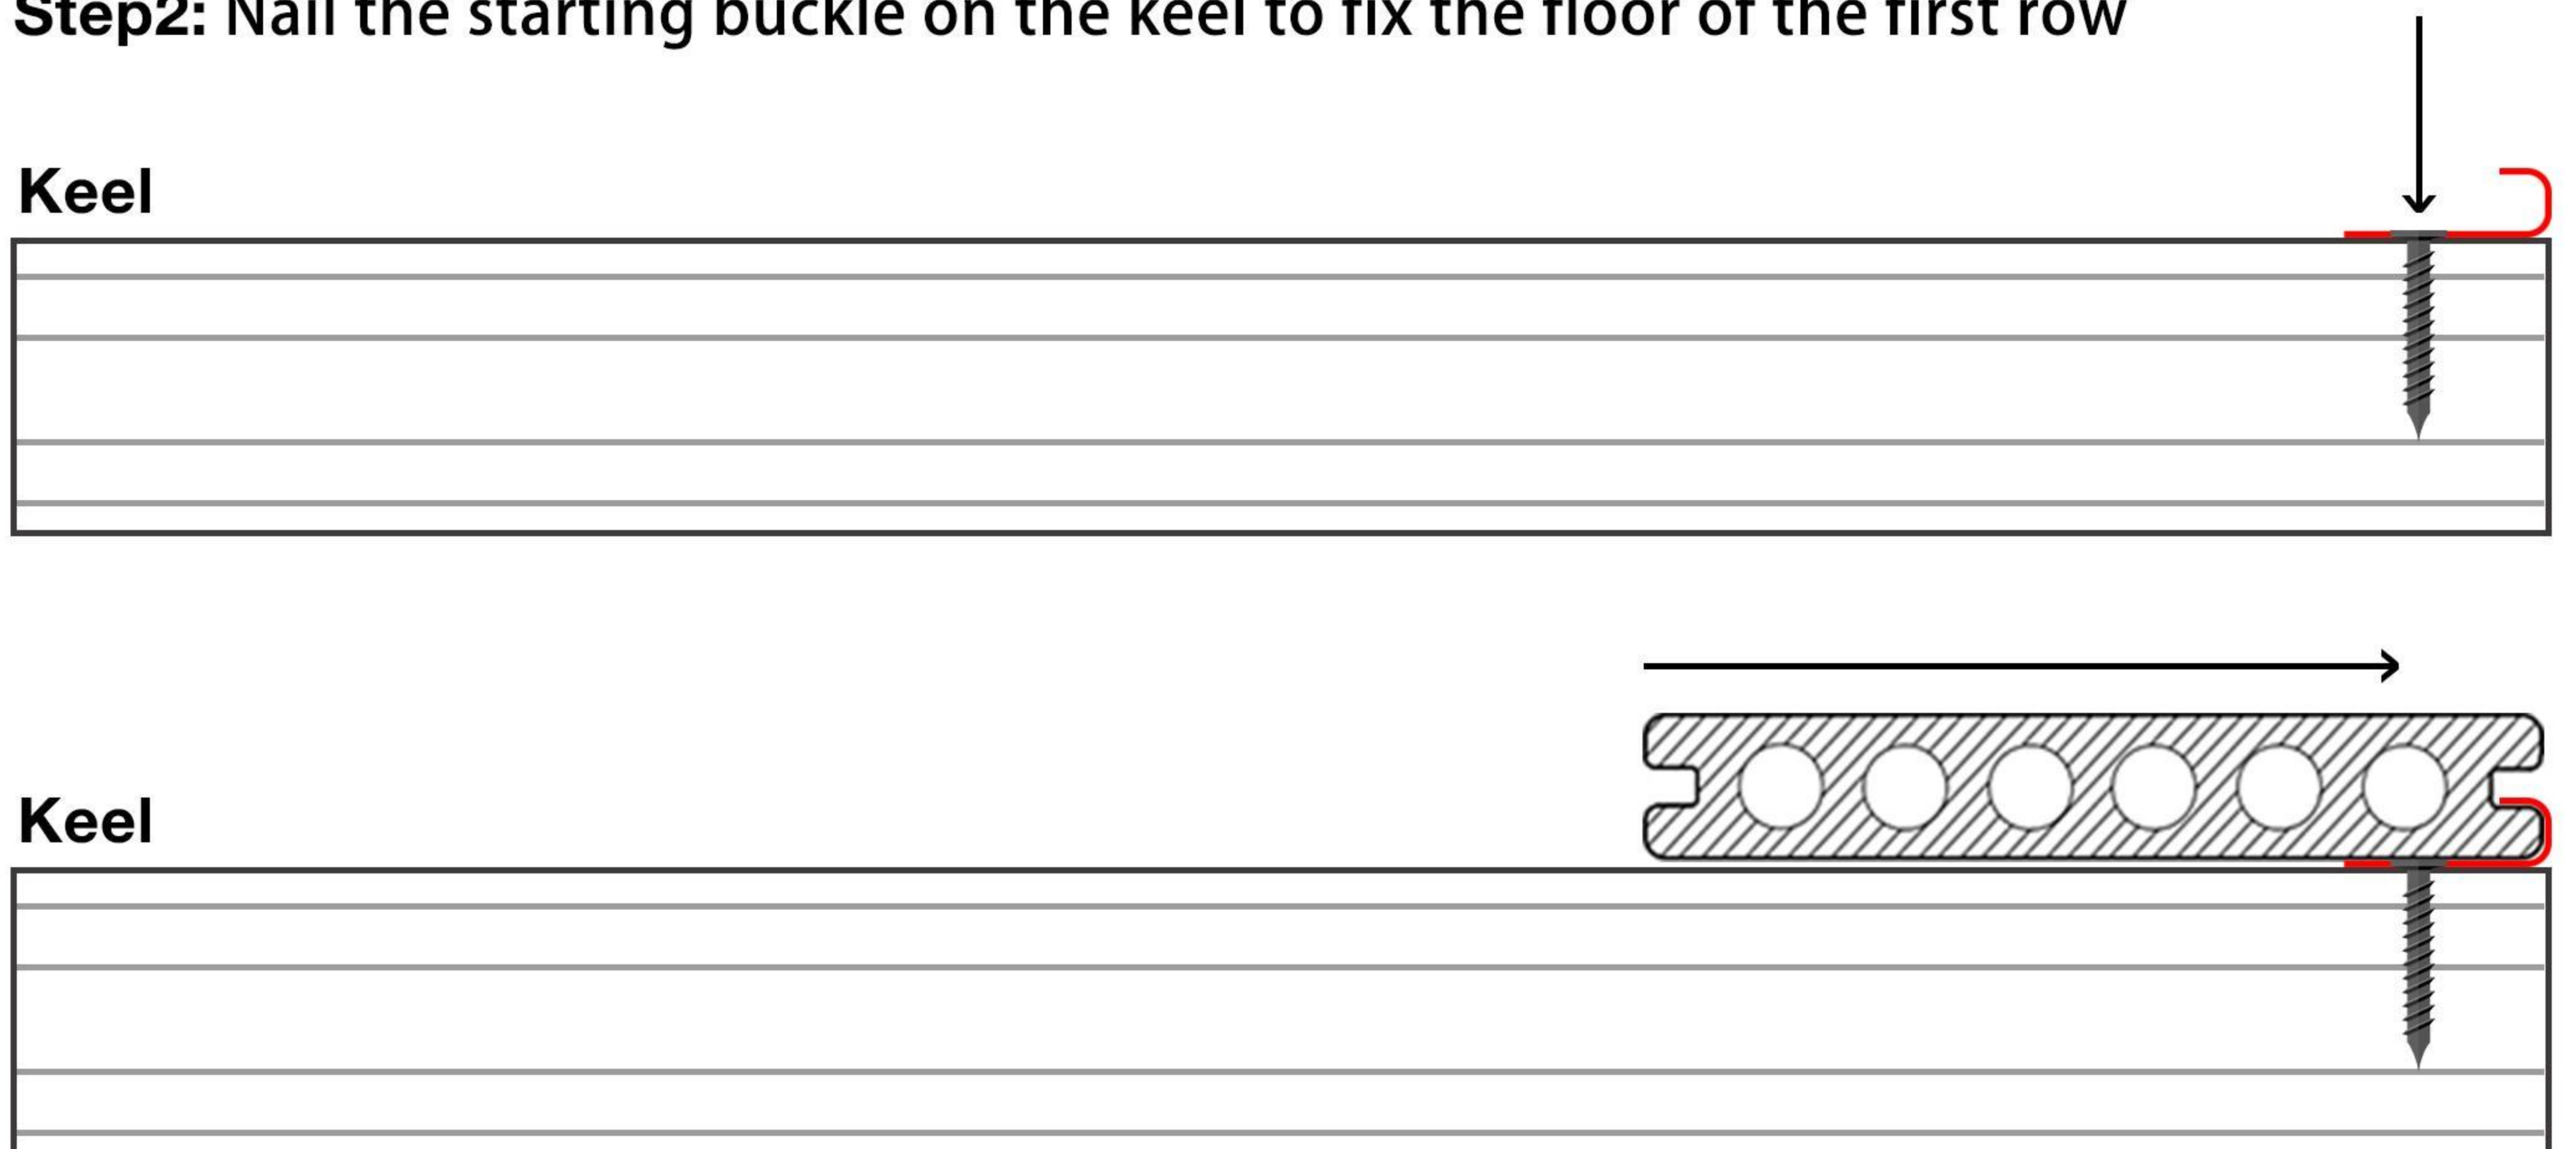

Step3: Install the fasteners between the floors and secure the second row of floors

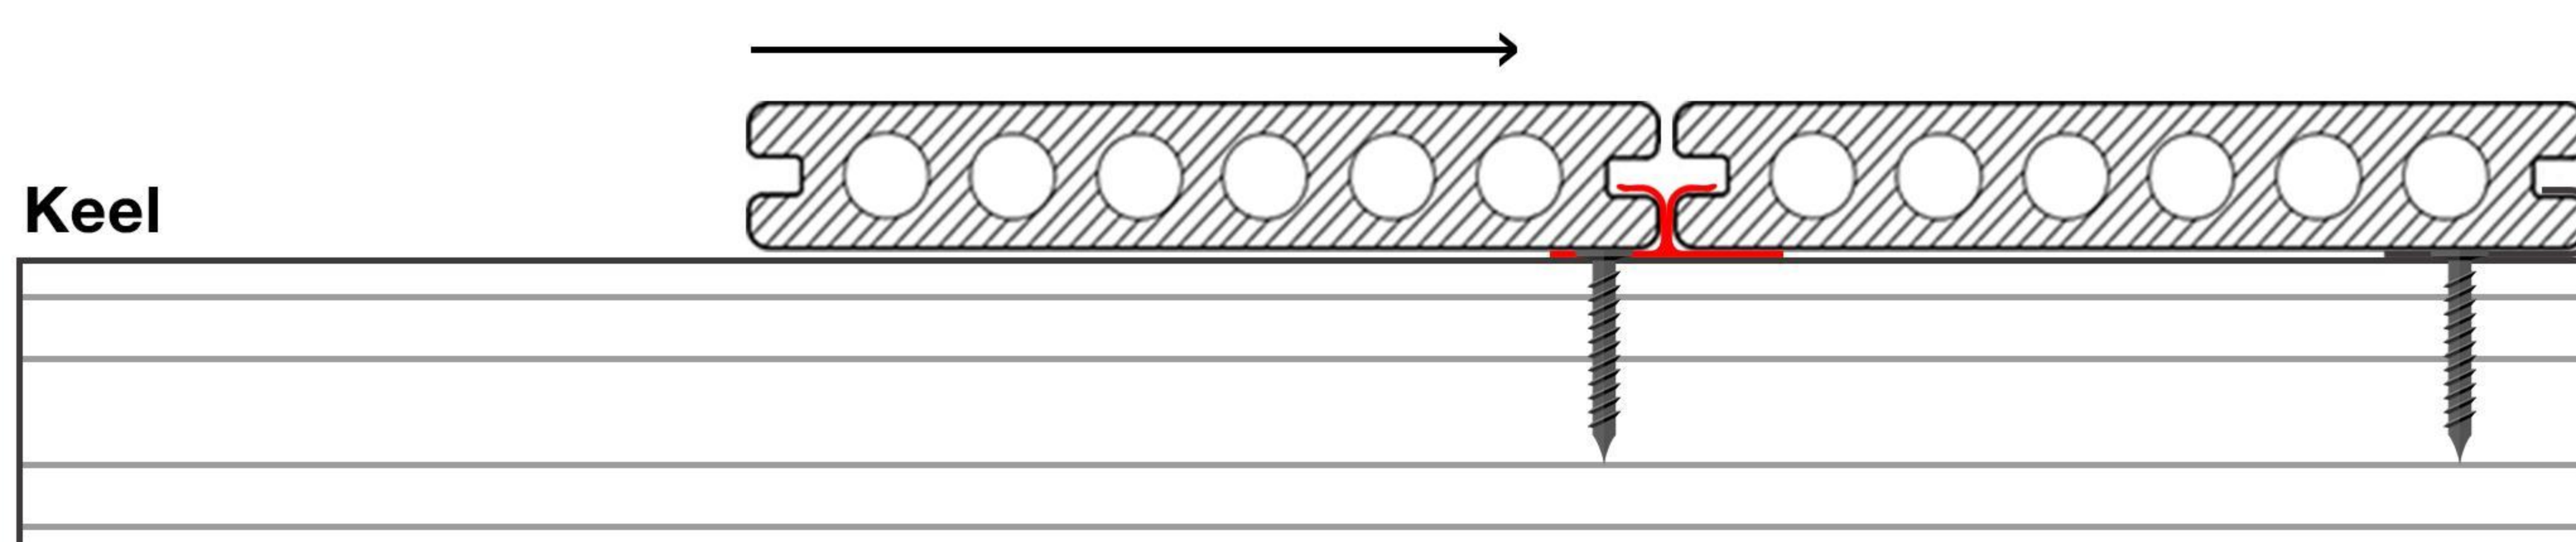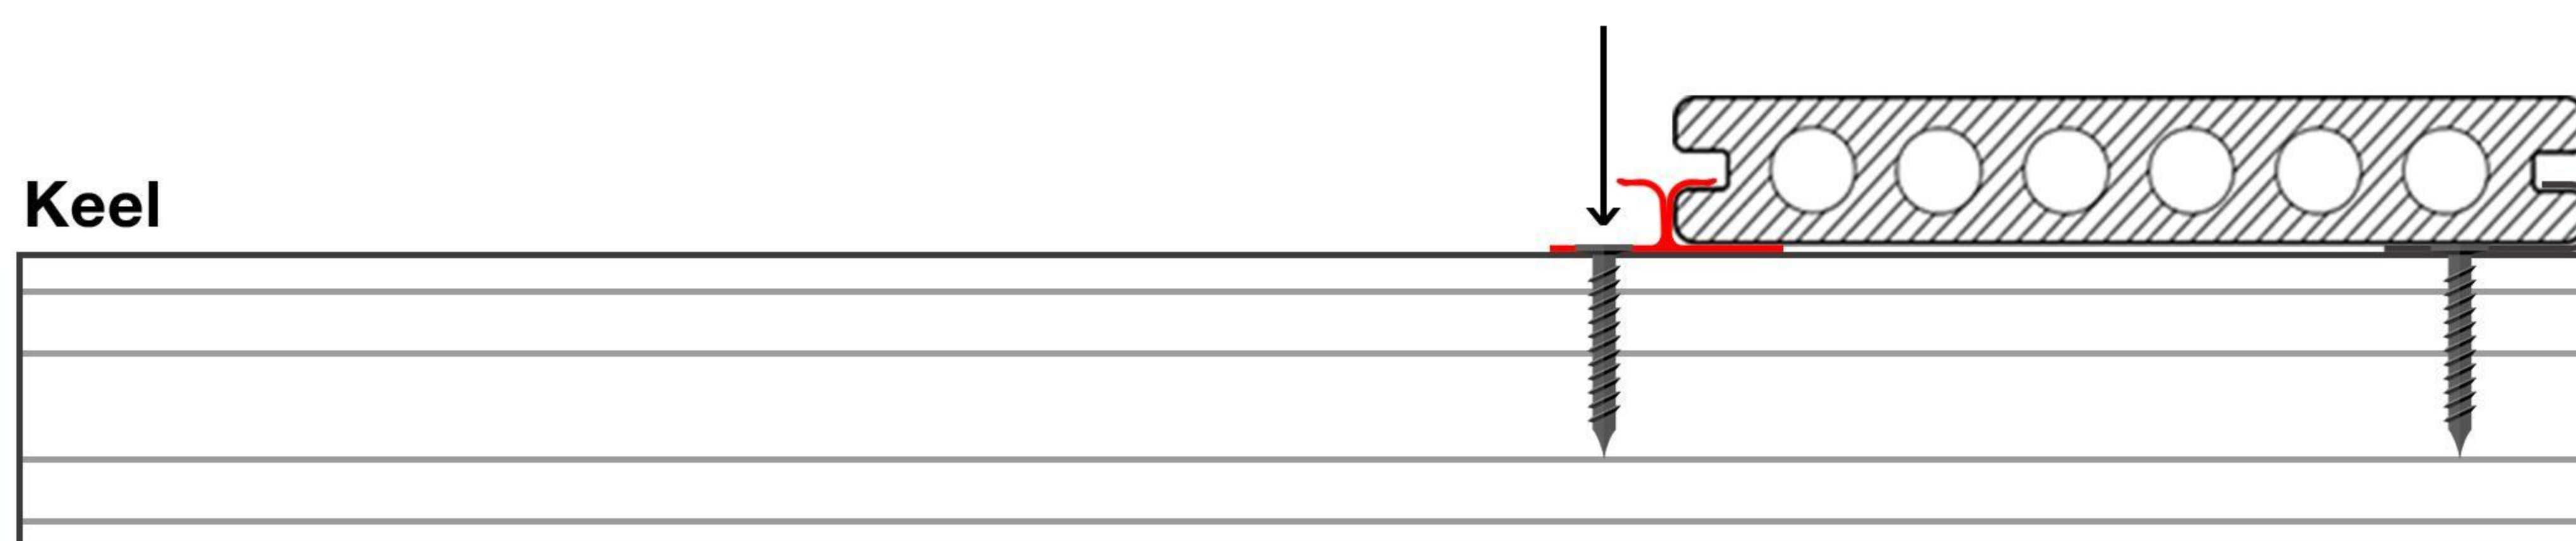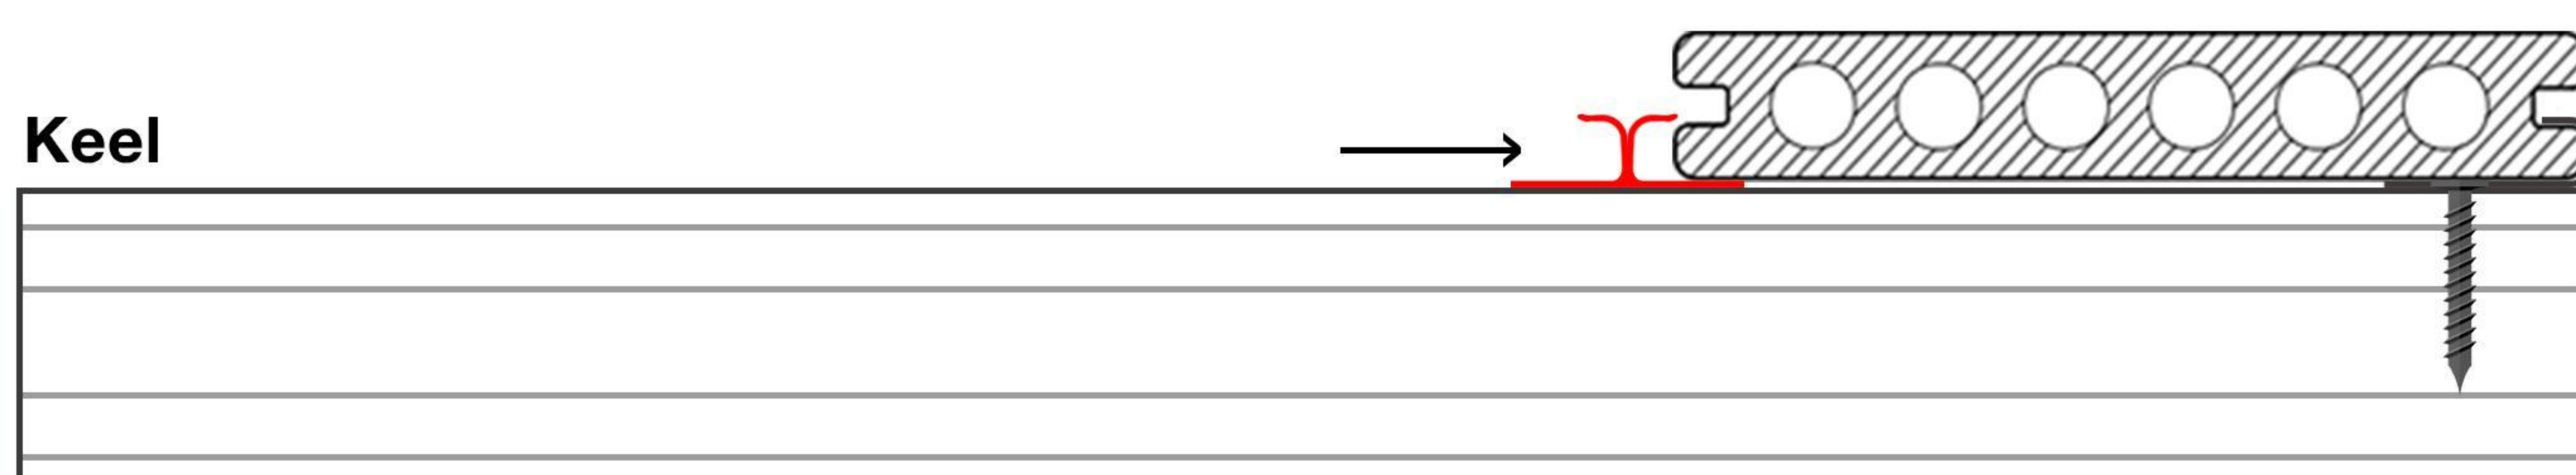

Step4: Repeat until the laying is complete

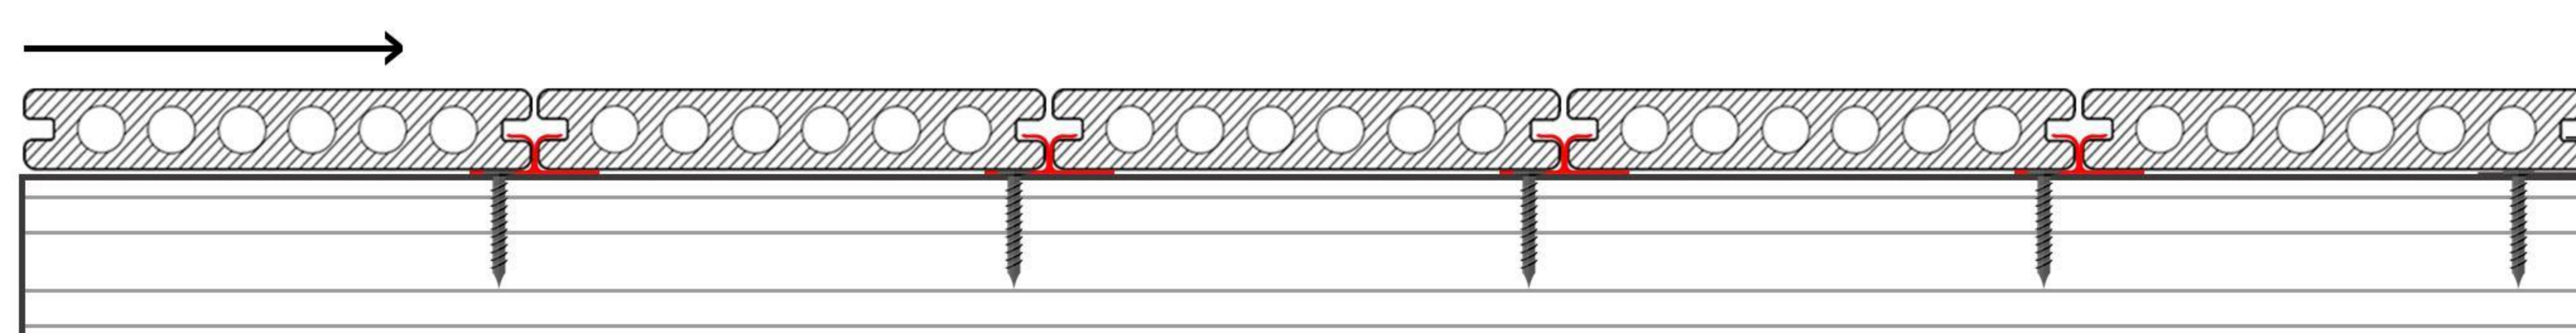

Step5: Screw the screw into the last wooden board and complete the installation

