



WPC Co-Extrusion Wall Panel

Installation Manual


- Without Edge banding

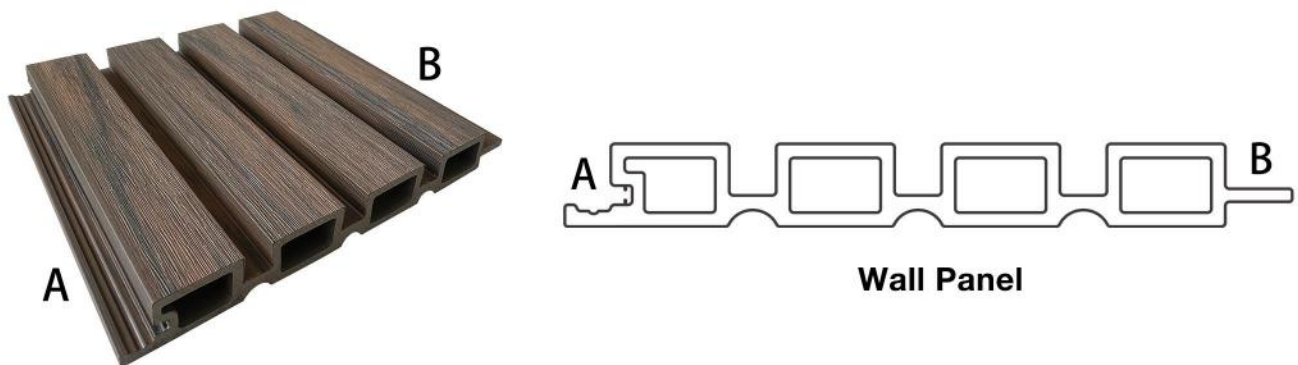

Step1: Screw A side and B side on back frame/wall.

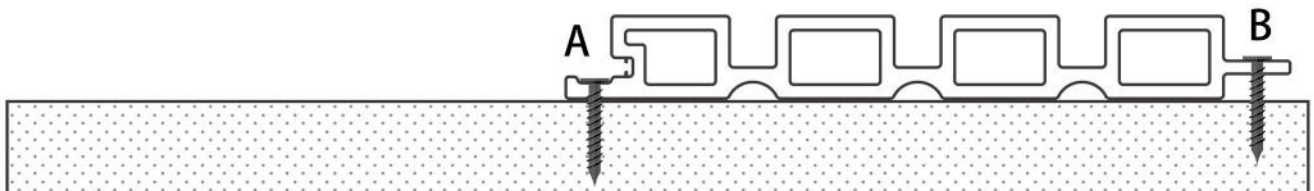



Step2: Link up the next panel to cover the screw with B side, and fix A side on back frame/wall(Repeat it to the end of wall).

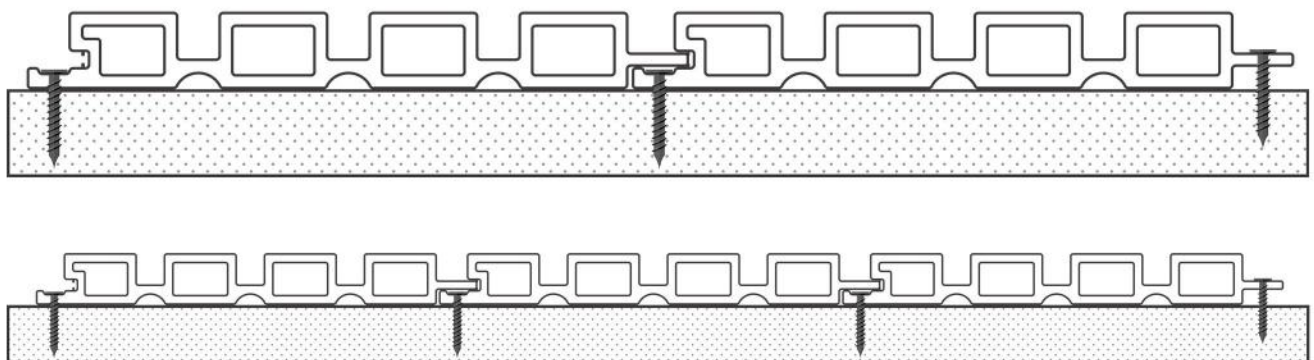

● With Edge banding




Wall Panel

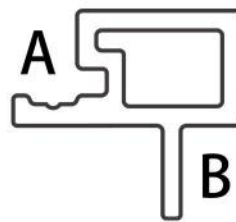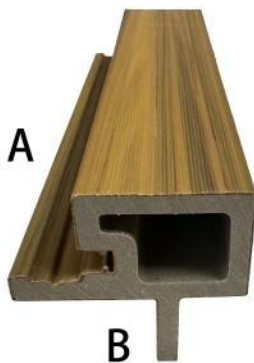


Edge banding


Step1: Screw A side and B side on back frame/wall.

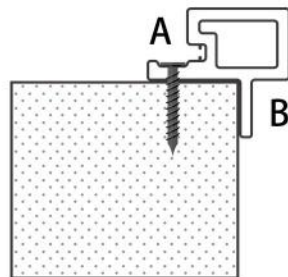

Step2: Link up panel to cover the screw with B side, and fix A side of panel on back frame/wall (Repeat it to the end of wall)

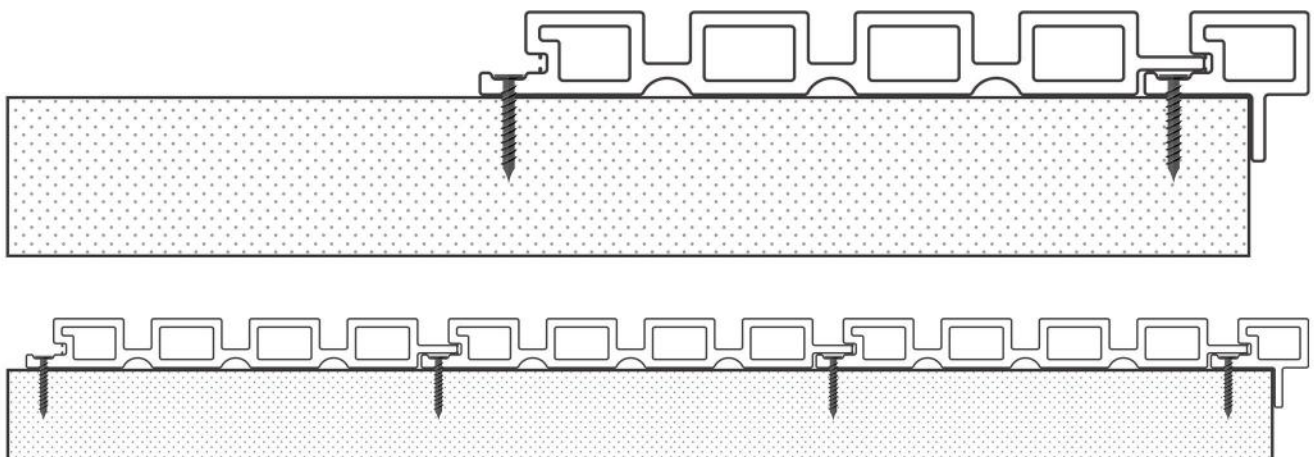

Step3: Coincide B side of edge banding with B side of panel,screw A and B side of panel on back frame/wall.

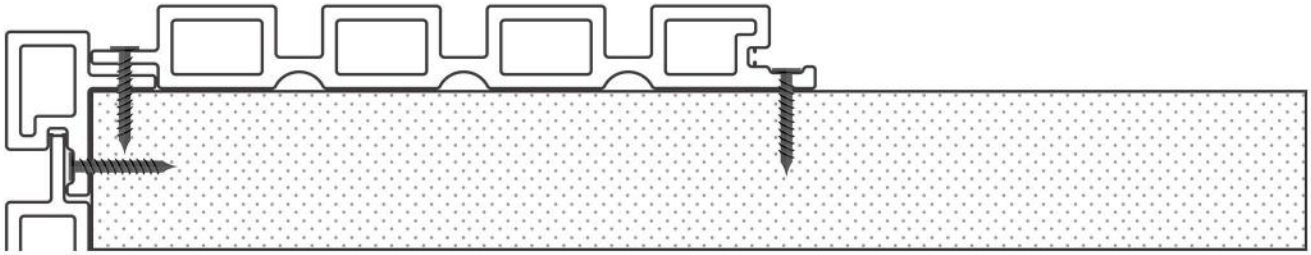

Step4: Use B side of panel to cover the screw and fix A side on back frame/wall (Repeat this action to the end of wall)

